

LoRaWAN Gateway auf dem Raspberry Pi 3

Hardware

- [Raspberry Pi 3 B+](#)
- [WM1302 Raspberry Pi Hat](#)
- [SMA to I-PEX Antenna Cable - 120mm](#)
- [Waveshare LPWA Lora Antenne, 868MHz, 5dBi, vertikal, SMA Male, IP65, Magnetfuß, 50 Ohm, 10W](#)
- [Wio-WM1302 Long Range Gateway Module\(USB\) - EU868](#)
- [Wio-WM1302 Long Range Gateway Module\(SPI\) - EU868](#)
- [Seeed Studio Wiki zum LoRaWAN® Gateway Modul WM1302](#)
- [Issue with GPS Synchronization in LoRa Packet Forwarder-waveshare SX1302 pi Hat #116](#)|[Issue with GPS Synchronization in LoRa Packet Forwarder-waveshare SX1302 pi Hat #116](#)

Installation

Die Installation erfolgt nach WIKI.

Bugfix für GPS Synchronisation

```
libloragw/src/loragw_gps.c:
832         if (nb_fields != 13) {
#
Change that to:
832         if ( (nb_fields != 13) && (nb_fields != 14) ) {
# This change will accept NMEA GPRMC messages with 13 or 14 fields, not only
those with 13 as before. The L76K receiver apparently defaults to sending
14-field-messages.
```

Bugfix für "Transmit downlink data packets"

Siehe Seeed Studio Wiki FAQ: „Why my devices can not join the network server even if all the settings are correct?“

```
mcedit /sx1302_hal/packet_forwarder/src/jitqueue.c
# change TX_JIT_DELAY from 40000 to 120000
#define TX_JIT_DELAY          40000    /* Pre-delay to program packet for
TX in microseconds */
#define TX_JIT_DELAY          120000   /* Pre-delay to program packet for
TX in microseconds */
```

SystemD Service

Den LoRaWAN Packet Forwarder als Systemd Service starten:

```
sudo touch /etc/systemd/system/loragateway.service
sudo mcedit /etc/systemd/system/loragateway.service
```

loragateway.service

```
[Unit]
Description=WM1302 LoRaWAN Gateway Service
After=network-online.target
Wants=network-online.target

[Service]
Type=simple
User=root
WorkingDirectory=/home/christoph/sx1302_hal/packet_forwarder
#ExecStartPre=/bin/sh -c '/home/pi/sx1302_hal/tools/reset_lgw.sh start'
ExecStart=/home/christoph/sx1302_hal/packet_forwarder/lora_pkt_fwd -c
/home/christoph/sx1302_hal/packet_forwarder/global_conf.json.sx1250.EU8
68.USB > /dev/null 2>&1
Restart=on-failure
RestartSec=10

[Install]
WantedBy=multi-user.target
```

Geräte-ID (Concentrator EUI) auslesen

```
./sx1302_hal/util_chip_id/chip_id -u -d /dev/ttyACM0
Opening USB communication interface
INFO: Configuring TTY
INFO: Flushing TTY
INFO: Setting TTY in blocking mode
INFO: Connect to MCU
INFO: Concentrator MCU version is V01.00.00
INFO: MCU status: sys_time:85510 temperature:40.4oC
Note: chip version is 0x10 (v1.0)
INFO: using legacy timestamp
ARB: dual demodulation disabled for all SF

INFO: concentrator EUI: 0x<16-stellige-EUI>

Closing USB communication interface
```

From:

<https://www.von-thuelen.de/> - **Christophs DokuWiki**

Permanent link:

https://www.von-thuelen.de/doku.php/wiki/projekte/lorawangateway_raspberry_pi_3/uebersicht?rev=1791119931

Last update: **2026/10/04 13:18**

